

WIRE INSTRUCTIONS FOR RBX4

RED WIRE – 12V TRIGGER FROM DXP/DXU UNIT OR PHYSICAL SWITCH

BLUE WIRE – OUTPUT TO LIGHTS, ECT...

YELLOW WIRE – 12V FROM BATTERY

WHITE WIRE – (**OPTIONAL**) 12V PASSTHROUGH FROM DASH SWITCH OR OTHER FACTORY SWITCH

BLACK WIRE – CHASSIS GROUND


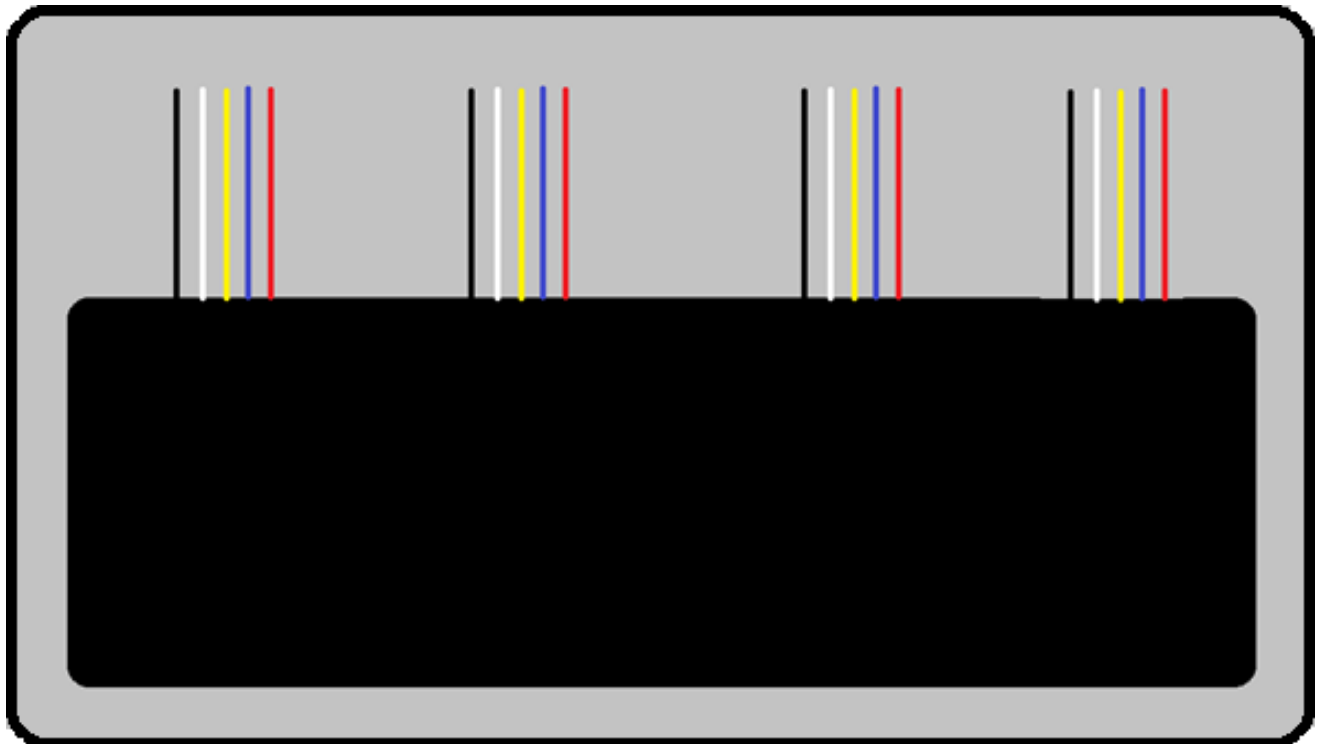


Diagram for Lightbar wiring

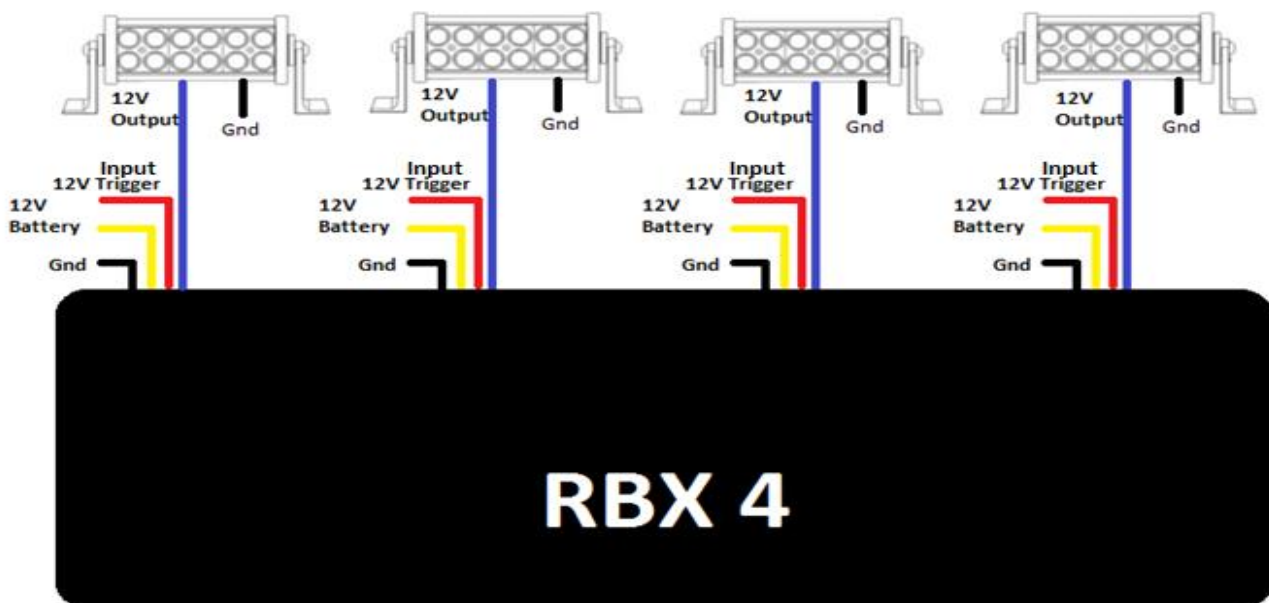

NOTE: When connecting ground wires, make sure to remove any paint for the chassis if using self-tapping screws and/or make sure the screws/nuts/bolts are securely tightened as vibration may cause it to loosen.