



In case of low volume when receiving incoming transmission, the “Volume” on the NCR2 must be raised to correct this. Procedure is as follows:

Adjusting the volume

1. Press the {PTT/CTRL} to select between A/B bands (Each band will have its own volume level)
2. Press the {VOL/SCAN} button located on the top row buttons above LCD (a blinking VOL will show on bottom right of LCD)
3. Turn the Menu knob to Increase/Decrease volume (From 1-20)
4. After selecting volume level, press the Menu knob to confirm and save. (This will have to be done to each band separately)