

BMA475
BMA476BT



WATERPROOF DIGITAL 4-CHANNEL AMPLIFIERS

INSTALLATION / OWNER'S MANUAL

IP66 Rated

 **Bluetooth**[®]
(BMA476BT)

NavAtlas[™]

INSTALLATION

Preparation

Amplifier Features

- Meets or exceeds ASTM d4329 (UV exposure)
- Built-in professional Bluetooth® signal processor module(BMA476BT)
- Intelligent switching between Bluetooth® and RCA signal(BMA476BT)
- Automatic Bluetooth® on and off(BMA476BT)
- SMD dedicated audio chip device
- Full MOSFET DC-DC PWM power supply
- Overload, short circuit, overheat, under voltage protection

Please read entire manual before installation. Due to the technical nature of amplifiers, it is highly recommended that your amplifier is installed by a professional installer or an authorized dealer.

Before You Start

- Disconnect negative battery terminal (consult qualified technician for instructions).
- Avoid installing the amplifier where it will be subject to high temperatures (such as from direct sunlight) or subject to dust, dirt or excessive vibration.
- Use extreme caution when drilling holes to avoid damaging fuel lines or existing wiring.
- All amplifier installations require power, signal and speaker wires (not included).
- An amplifier installation kit (sold separately) is highly recommended to facilitate the installation. Consult your dealer for recommendations.

Mounting Location

- Choose a mounting location for the amplifier.
- The amplifier can be mounted horizontal (recommended) or vertical. For optimum performance, make sure to provide at least 1" of space around all sides. Do not mount the amplifier under carpets or where airflow is restricted.
- The optimum mounting location varies. Remember to test all amplifier functions before completing the final mounting procedure.



TYPICAL MOUNTING METHOD

INSTALLATION

Connection Descriptions

NOTE:

Be sure to follow specific instructions included with your amplifier installation kit (not included with this amplifier). The information below should be used as a general guideline only.

Power Wire (+12V)

- Disconnect negative battery terminal before proceeding. Consult a qualified technician for instructions if you are unsure.
- Plan wire routing before cutting any wires to length. Begin by routing the power +12V wire from the battery to the amplifier location. Use a grommet when running wires through the firewall or metal openings. Avoid running the power wire near existing vehicle wiring to prevent induced noise from entering the audio system.
- Use extreme caution when drilling holes to avoid damaging fuel lines or existing wiring.
- The +12V wire MUST be fused within 18" of the battery for protection of the vehicle's electrical system.

Ground Wire (GND)

- The amplifier ground wire should be as short as possible (no more than 36" or 1 meter). Choose a clean unpainted section of metal or the vehicle chassis when attaching the ground connection. Be sure to clean the area of any dirt or grease.

Remote Turn-on Wire (REM)

- The remote turn-on wire connects to the head unit's amplifier turn-on lead or power antenna output.

Speaker Wires

- Choose adequate gauge speaker wire depending on your exact amplifier/speaker combination. Be sure to observe polarity when connecting.
- Do not ground any speaker wires or connect any speaker wires together.

Input Signal

- The amplifier's input signal connects to the head unit's low level (RCA) outputs.


CAUTION

- Keep low level inputs away from any power wires to avoid engine noise.
- Never run any wires underneath or outside the vehicle


INSTALLATION

Audio Inputs

BMA475

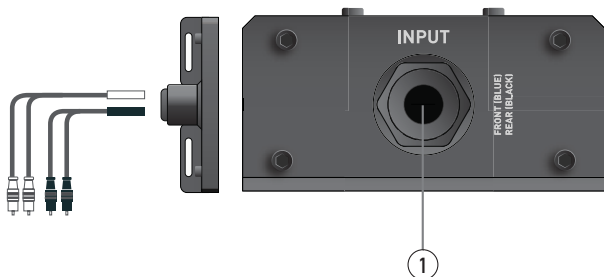

BMA476BT

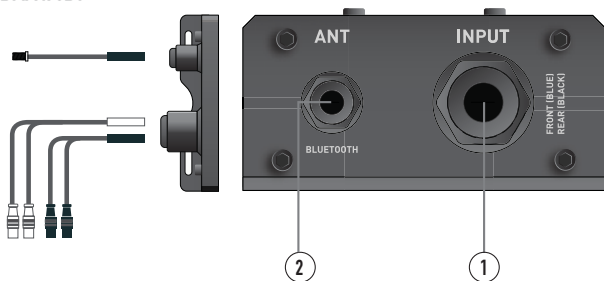


① Audio Input

② Bluetooth Antenna

INSTALLATION

Amplifier Controls

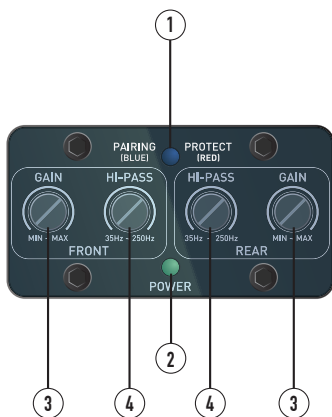

BMA475
BMA476BT

- ① Bluetooth Pairing LED (ONLY BMA476BT)

Protection Mode LED


- ② Power

- ③ Gain

- ④ High Pass Filter

INSTALLATION

Power and Speaker Connections

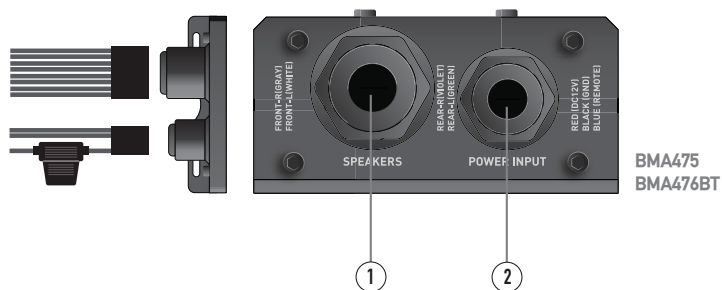


① Speaker Outs

② Power Input

INSTALLATION

Typical Wire Routing

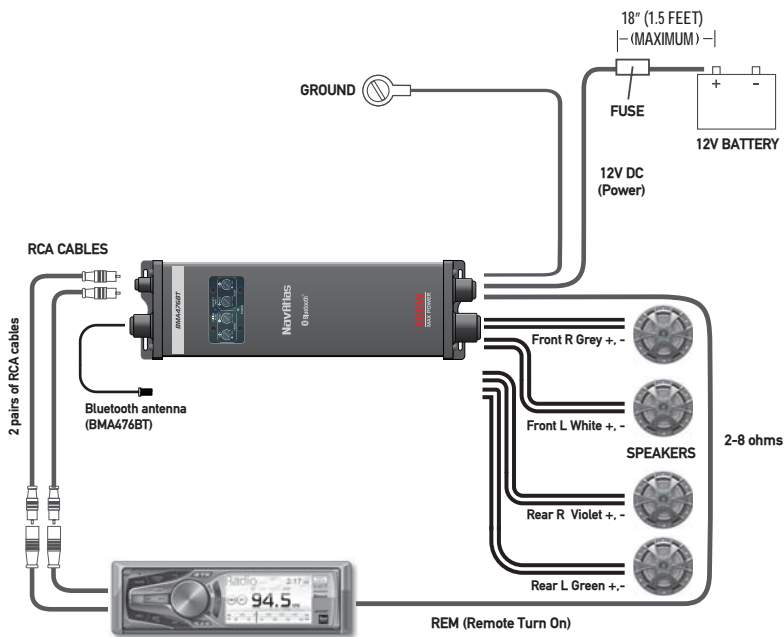

Main Power Connections

Connect +12V, GND and REM wires accordingly. A suitable fuse **MUST** be installed on the +12V lead within 18" of the battery for protection of the vehicle's electrical system.

Fuse Rating

When replacing fuses, make sure new fuse is the correct type and amperage. Using an incorrect fuse could damage the amplifier.

BMA475 30Ax1
BMA476BT 30Ax1

Power/Ground Wire Size

For optimum performance, use only the wire size listed below or larger. Make sure to use the same size power and ground wire.

BMA475 AWG12
BMA476BT AWG12


INSTALLATION

Amplifier Connections

Speaker Connections


Connect speaker wires observing polarity. The minimum impedance is 2 ohms. (4ohms only for bridge mode.)

4 Speakers (stereo)

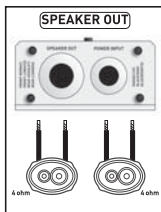

Typical Stereo Wiring
(2 ohms minimum)

Speakers (bridged)

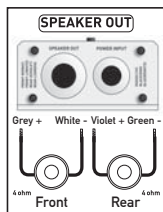


Typical Bridged Wiring
(4 ohms only)

Input Signal Connections

Low Level Input (RCA)

Low level (RCA) input signal is preferred for best performance. Using twisted pair construction RCA cables will minimize noise.

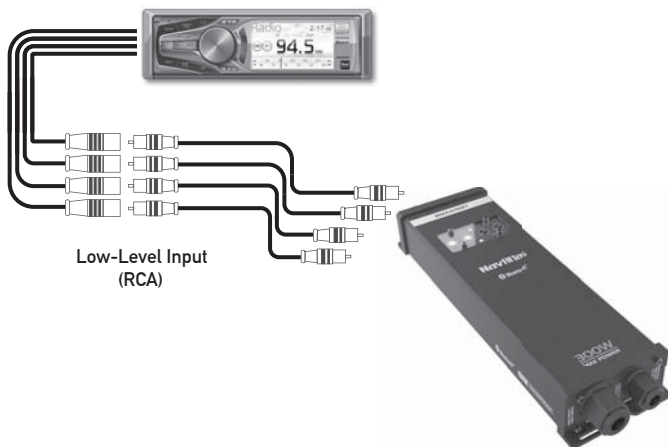

Low-Level Input
(RCA)

INSTALLATION

Configuration/Setup

Input level Control	The input level control (gain) is used to obtain the best possible match between the head unit audio output and the amplifier input. Begin by turning the input level control fully counterclockwise. Next, turn up the head unit volume control around 3/4 of the way up. Adjust the input level control clockwise until audible distortion is heard, then slightly counterclockwise to provide the best match. Repeat for all input level controls.
Hi-Pass Frequency Control	This control allows precise adjustment of the crossover frequency (35Hz - 250Hz).
LED Indicators (at the top panel of amplifier)	The green LED indicator illuminates during normal operation (POWER) and the red LED indicator is visible when the amplifier detects a fault (PROTECTION). The Blue LED indicator is visible when BMA476BT is paired with Bluetooth device (PAIRING).

***Note :** Loosen/tighten the screws to open/close the control panel at top of the amplifier.

INSTALLATION

Bluetooth Operation (BMA476BT)

Pairing a Device

Preparation | Before you can use a Bluetooth device, it must be paired and connected. Make sure that Bluetooth is activated on your device before you begin the pairing process.

Pairing a New Device | The BMA476BT broadcasts the pairing signal constantly when no devices are currently connected. Complete the pairing sequence from your Bluetooth device.

The device name is "NA300BT"

Streaming Audio Operation

The BMA476BT supports A2DP (advanced audio distribution profile) wireless streaming audio from your Bluetooth mobile device directly.

When paired, you can also control your music from your Bluetooth mobile device.

Note before you use Bluetooth:

1. Once your device has been paired to the BMA476BT, it will automatically connect when the device is in range, there will not be a need to manually connect once the amplifier is powered off and on.
2. When your device and the BMA476BT are connected, the amplifier will automatically switch from Line-in (RCA) to BT streaming once a music app is started (Music player, Internet radio, ECT...)
3. When an incoming phone call is received, the music will pause and resume once the call has ended, incoming calls will not be transmitted to the amplifier (Hands-free mode is not supported, only A2DP streaming)
4. To switch back to Line-in (RCA) on the amplifier, all music apps on your device must be stopped and terminated.

INSTALLATION

Specifications

BMA475

Power Output:

- **75 Watts x 4 channels @ 4 Ohms**
- **98 Watts x 4 channels @ 2 Ohms**
- **140 Watts x 2 channels @ 4 Ohms**
- **300 Watts total RMS Power**

Peak Music Power Output: 1200 Watts

Signal to noise ratio: > 80dB (THD < 0.5% @ 4Ω, 14.4V)

Frequency response: 10Hz - 25kHz (4 Ohms)

Amplifier dimensions: 10" W x 3" H x 1.5" D

BMA476BT

Power Output:

- **75 Watts x 4 channels @ 4 Ohms**
- **98 Watts x 4 channels @ 2 Ohms**
- **140 Watts x 2 channels @ 4 Ohms**
- **300 Watts total RMS Power**

Peak Music Power Output: 1200 Watts

Signal to noise ratio: > 80dB (THD < 0.5% @ 4Ω, 14.4V)

Frequency response: 10Hz - 25kHz (4 Ohms)

Amplifier dimensions: 10" W x 3" H x 1.5" D

Bluetooth

- **A2DP, AVRCP**
- **Bluetooth 4.0+EDR**
- **iOS and Android support**

CEA-2006 Power Standard Specifications
(reference: 14.4VDC +/- 0.2V, 20Hz~20kHz)

Power Output:

75 Watts RMS x 4 channels at 4 ohms and ≤ 1% THD+N

Signal to Noise Ratio: 85dBA (reference: 1 watt into 4 ohms)



INSTALLATION

Troubleshooting

Problem	Cause	Action
Unit will not turn on (no power LED indicator)	+12V wire not connected or incorrect voltage. REM wire not connected or incorrect voltage	Check connections for proper voltage (11~16VDC)
	GND wire not connected	Check connection to ground
	Fuse(s) blown	Replace fuse(s)
Unit has power - LED is green (but no sound)	Speaker wires not connected	Check connections at speakers
	Volume turned all the way down	Increase volume level at head unit
	One or more speaker wires touching each other or touching chassis ground	Insulate all bare speaker wires from each other and chassis ground
	Speaker(s) defective or damaged	Check/replace speaker(s)
	Input signal not connected	Check high or low level inputs for proper connection
Unit blows fuse(s)	Incorrect fuse rating	Use fuse(s) with correct rating
	+12V wire touching chassis ground	Check for pinched wire
	Speaker(s) defective or damaged	Check/replace speaker(s)
Engine noise	Bad ground connection	Make sure amplifier is grounded to clean bare metal
	Signal ground loop or RFI (radio frequency interference)	Re-route RCA cables from existing high current wiring
LED illuminates red (protect mode)	One or more speaker wires touching each other or touching chassis ground	Insulate all bare speaker wires from each other and chassis ground
	Speaker(s) defective or damaged internally (shorted)	Check/replace speaker(s)
	Speaker load less than 2 ohms (stereo). Speaker load less than 4 ohms (bridged)	Adjust speaker load - amplifier will not operate at less than 4 ohms when bridged
Distorted audio output	Incorrect input signal type or input level too high	Check connections and reduce/adjust input level
Low audio output	Incorrect input signal type or input level too low	Check connections and increase/adjust input level
Unstable Bluetooth signal	BT signal needs improvement	Extend Bluetooth antenna wire

INSTALLATION

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Only shielded interface cable should be used.

Finally, any changes or modifications to the equipment by the user not expressly approved by the grantee or manufacturer could void the users authority to operate such equipment.

INSTALLATION

One-Year Limited Warranty

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Namsung America Corp. warrants this product to the original purchaser to be free from defects in material and workmanship for a period of one year from the date of the original purchase.

Namsung America Corp. agrees, at our option, during the warranty period, to repair any defect in material or workmanship or to furnish an equal new, renewed or comparable product (whichever is deemed necessary) in exchange without charges, subject to verification of the defect or malfunction and proof of the date of purchase. Subsequent replacement products are warranted for the balance of the original warranty period.

Who is covered? This warranty is extended to the original retail purchaser for products purchased from an authorized dealer and used in the U.S.A.

What is covered? This warranty covers all defects in material and workmanship in this product. The following are not covered: software, installation/removal costs, damage resulting from accident, misuse, abuse, neglect, product modification, improper installation, incorrect line voltage, unauthorized repair or failure to follow instructions supplied with the product, or damage occurring during return shipment of the product.

What to do?

1. Before you call for service, check the troubleshooting guide in your owner's manual. A slight adjustment of any custom controls may save you a service call.
2. If you require service during the warranty period, you must carefully pack the product (preferably in the original package) and ship it by prepaid transportation with a copy of the original receipt from the retailer to an authorized service center.
3. Please describe your problem in writing and include your name, a return UPS shipping address (P.O. Box not acceptable), and a daytime phone number with your shipment.
4. For more information and for the location of the nearest authorized service center please contact us:
 - Call us toll-free at 1-844-NAVATLAS, 1-844-628-2852

Exclusion of Certain Damages: This warranty is exclusive and in lieu of any and all other warranties, expressed or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose and any obligation, liability, right, claim or remedy in contract or tort, whether or not arising from the company's negligence, actual or imputed. No person or representative is authorized to assume for the company any other liability in connection with the sale of this product. In no event shall the company be liable for indirect, incidental or consequential damages.

NavAtlas™

Customer Service Toll Free: 1-844-628-2852

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc.
and any use of such marks by Namsung is under license.

Details and specifications mentioned in this document may be updated and subject to change without notice.

©2016 Namsung America Corp. All rights reserved.
NSC0118 -V01